

# Chapter 1

# Logging In to the Server Suite Portal

---

## Abstract

The Server Suite is a management platform for [IT](#) devices. It implements unified management of [VANTAGEO](#) servers and storage products in [GUI](#) mode.

The Server Suite portal is a management portal. You can perform related operations on the Server Suite portal only after you log in to it.

## Prerequisite

One of the following browsers is already installed on your [PC](#) (hereinafter referred to as the client):

- Google Chrome 62 or later
- Firefox 60 or later

## Steps

1. In the address bar of the specified browser, enter the address of the Server Suite portal, and press the **Enter** key. The page for logging in to the portal is displayed, see [Figure 1-1](#).

**Figure 1-1 Logging In to the Server Suite Portal**



**Note**

The format of the login address is `https://IP`.

- If the Server Suite is deployed in single-server mode, **IP** is the IP address of the TECSClient networkplane.
- If the Server Suite is deployed in two-server mode, **IP** is the floating IP address of the TECSClientnetwork plane.

2. Enter your username and password.

**Note**

The default username and password are as follows:


- Username: admin
- Password: Server Suite\_123

**Note**

After you log in to the Server Suite portal by using the default password, you must change the defaultpassword immediately. It is recommended that you change the default password to a strong password.


3. Click **Login**. The **Privacy Protection Notice** dialog box is displayed, see [Figure 1-2](#).

**Figure 1-2 Privacy Protection Notice Dialog Box**

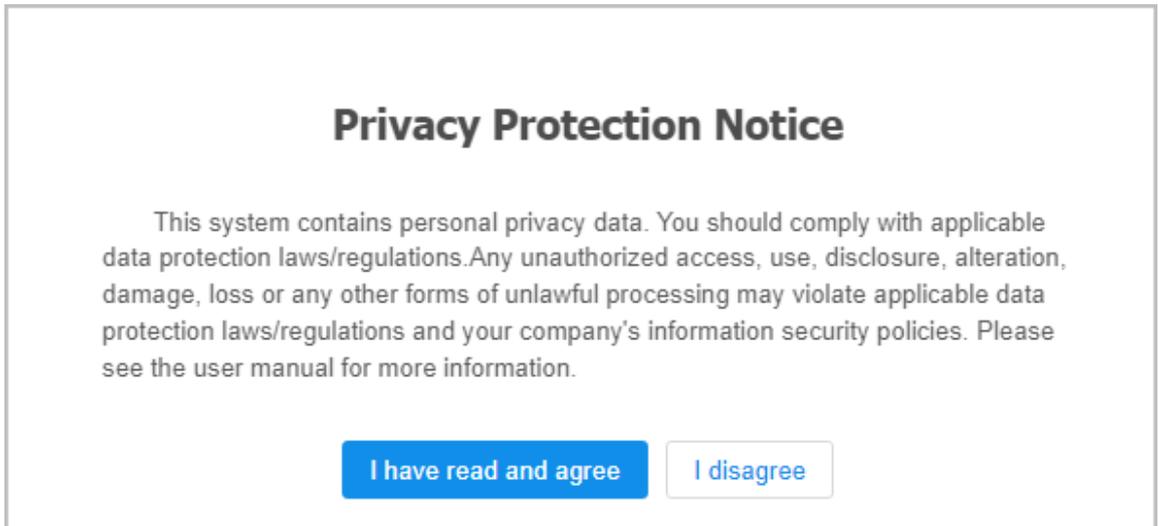

4. Click **I have read and agree**. The **License** dialog box is displayed, see [Figure 1-3](#).

**Figure 1-3 License Dialog Box**

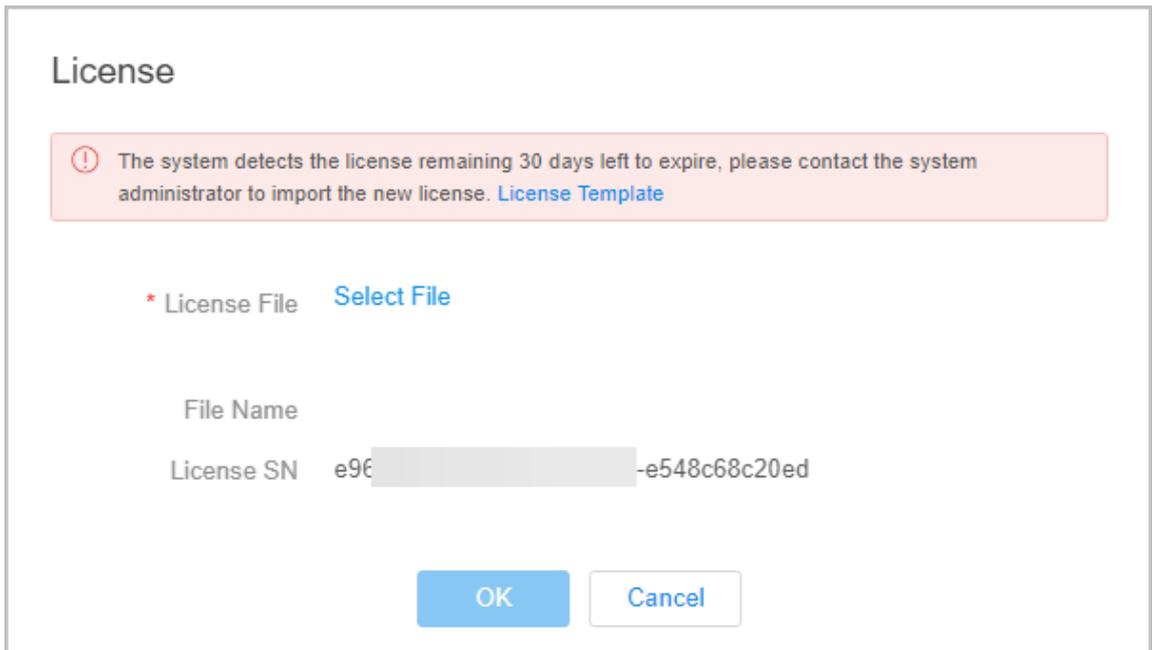

5. Perform either of the following operations as required.


To...	Do...
Use the license that you have obtained	<ol style="list-style-type: none"> <li>Click <b>Select File</b>, and then select the corresponding license file.</li> <li>Click <b>OK</b>. The <b>Overview</b> page is displayed, see <a href="#">Figure 1-4</a>.</li> </ol>
Use the trial license provided by the Server Suite portal	Click <b>Cancel</b> . The <b>Overview</b> page is displayed, see <a href="#">Figure 1-4</a> .



**Note**

After the Server Suite server is installed, a trial license is provided. You can also request a license at <http://csc.Vantageo.com.cn>.

**Figure 1-4 OverView Page**

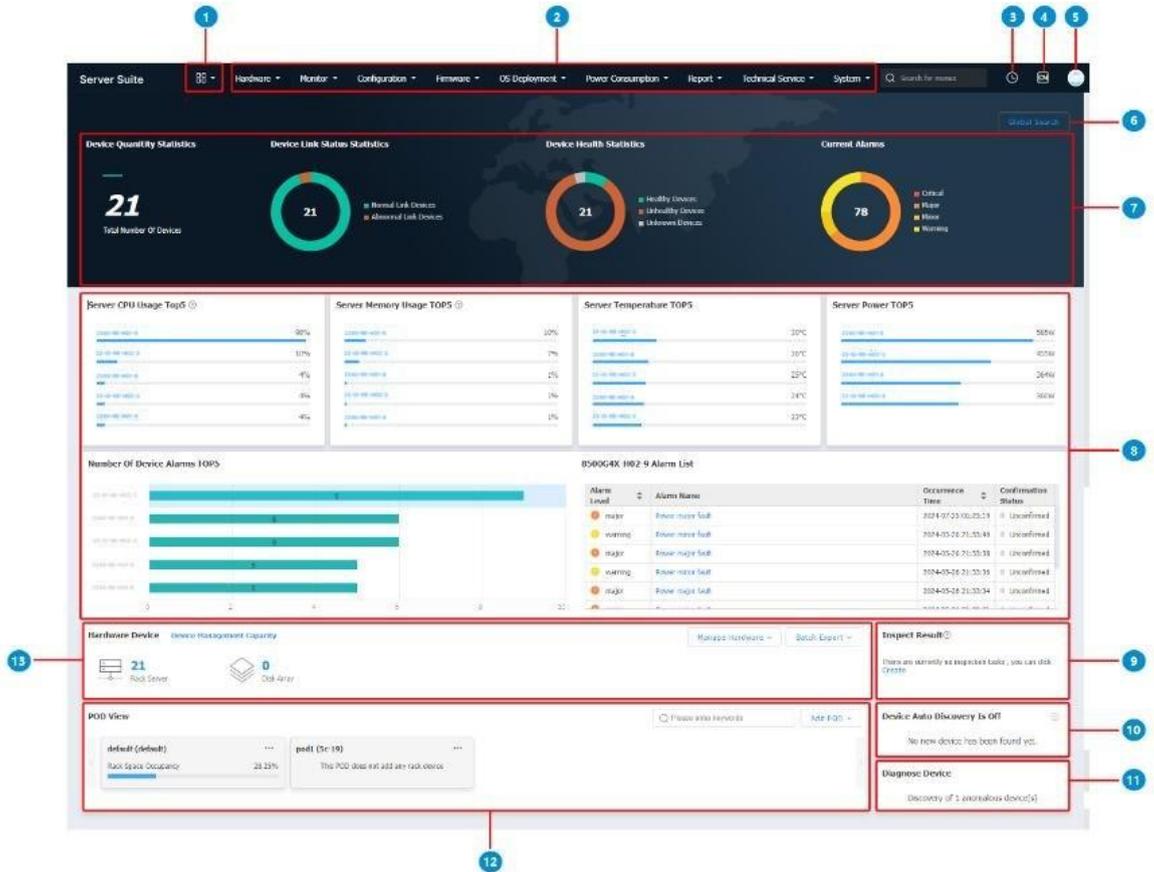

For a description of the **OverView** page, refer to [Table 1-1](#).

**Table 1-1 Descriptions of the OverView Page**

No.	Name	Description
1	Menu overview button	Displays all function menus after you hover the mouse pointer over this button.
2	Menu bar	Displays function menus by category. After you hover the mouse pointer over a function menu in the menu bar, all the submenus under the function menu are displayed. After you click any submenu under a function menu in the menu bar, all the submenus under the function menu are displayed in the format of a navigation tree in the left pane.

No.	Name	Description
3	Task progress button	Displays task progress after you hover the mouse pointer over this button.
4	Language button	Allows you to change between languages.
5	Current user	<p>Displays the currently logged-in user.</p> <p>If you click the current user, a shortcut menu containing the following options is displayed:</p> <ul style="list-style-type: none"> <li>● <b>Modify Personal Information</b> After you select this option, the <b>Modify Personal Information</b> dialog box is displayed, and you can modify personal information.</li> <li>● <b>mobile number</b> After you select this option, the <b>Modify mobile number</b> dialog box is displayed, and you can set the new phone number.</li> <li>● <b>mobile serial number</b> After you select this option, the <b>Modify mobile serial number</b> dialog box is displayed, and you can set the new <a href="#">IMEI</a>.</li> <li>● <b>Modify password</b> After you select this option, the <b>Modify password</b> dialog box is displayed, and you can modify the login password.</li> <li>● <b>Logout</b> After you select this option, the <b>Logout</b> dialog box is displayed, and you can log out of the portal.</li> </ul>
6	Global search button	Navigates to the <b>Global Search</b> page where you can search for all the managed devices after you click this button.
7	Area for basic information statistics on devices	<p>Displays statistics on all the managed devices, including:</p> <ul style="list-style-type: none"> <li>● Quantity</li> <li>● Link status</li> <li>● Health status</li> <li>● Active alarms</li> </ul>
8	Top 5 indicator statistics area	<p>Displays indicator statistics on top 5 devices among all the managed devices, including:</p> <ul style="list-style-type: none"> <li>● <a href="#">CPU</a> usage</li> <li>● Memory usage</li> <li>● Temperature</li> <li>● Power</li> <li>● Number of alarms</li> </ul>


No.	Name	Description
		Note: The list of alarms on the device that has the largest number of alarms is displayed on the right of the <b>Number Of Device Alarms TOP5</b> area.
9	Inspect Result	Displays the latest firmware inspection result. If there is no firmware inspection task, you can click <b>Create</b> to create a firmware inspection task.
10	Device auto-discovery area	Displays automatically discovered devices. After clicking this area, you can set a device discovery rule and a device masking rule.
11	Device diagnosis area	Displays the diagnosis results of devices. After clicking this area, you can view the detailed diagnosis information and export the information to your local disk.
12	POD view	Displays the information about the existing PODs, and allows you to edit and delete them. To add a POD manually or import PODs in batches, you can click <b>Add POD</b> in the upper right corner.
13	Hardware device view	Displays the number of managed devices in categories and allows you to perform the following operations: <ul style="list-style-type: none"> <li>● Hardware management <ul style="list-style-type: none"> <li>→ Adding a rack, server, and disk array manually</li> <li>→ Adding racks, servers, and disk arrays in batches</li> <li>→ Modifying device connection information</li> <li>→ Configuring the monitoring period</li> <li>→ Configuring device access rate</li> </ul> </li> <li>● Batch export <ul style="list-style-type: none"> <li>Exporting information about PODs, racks, and devices in batches</li> </ul> </li> </ul>

### Related Tasks

If you log in to the Server Suite portal for the first time and are prompted to change your password, change your password in accordance with the password rule. The dialog box for changing your password is shown in [Figure 1-5](#).

The password must consist of eight or more characters, which must include three of the following types: uppercase letters, lowercase letters, digits, and special symbols.

Figure 1-5 Changing Your Password

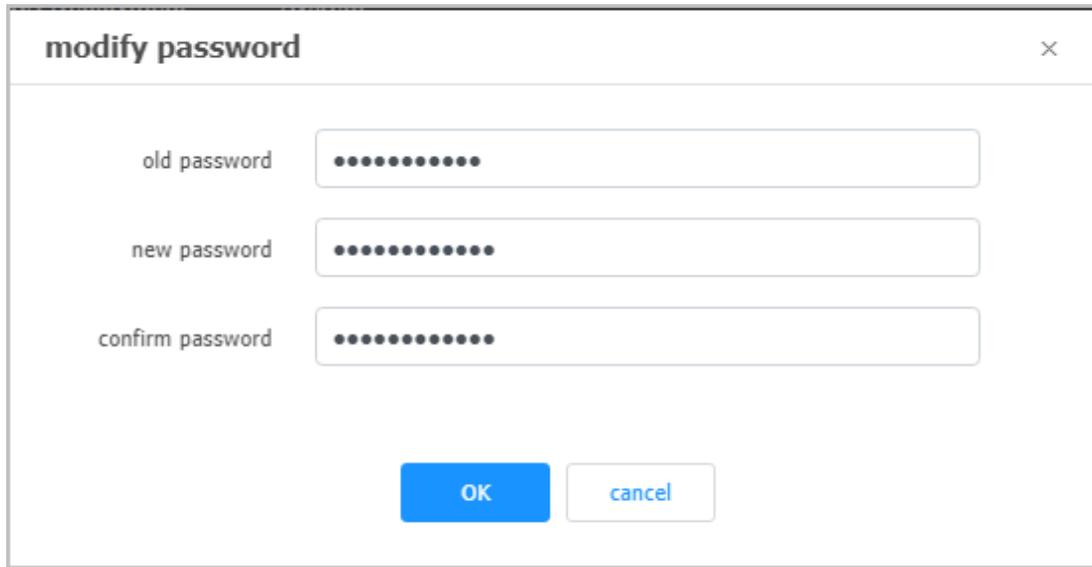

The image shows a dialog box titled "modify password" with a close button (X) in the top right corner. It contains three input fields, each with a label to its left and a masked password field (represented by dots) to its right:

- old password
- new password
- confirm password

At the bottom of the dialog box, there are two buttons: a blue "OK" button and a white "cancel" button with a blue border.